


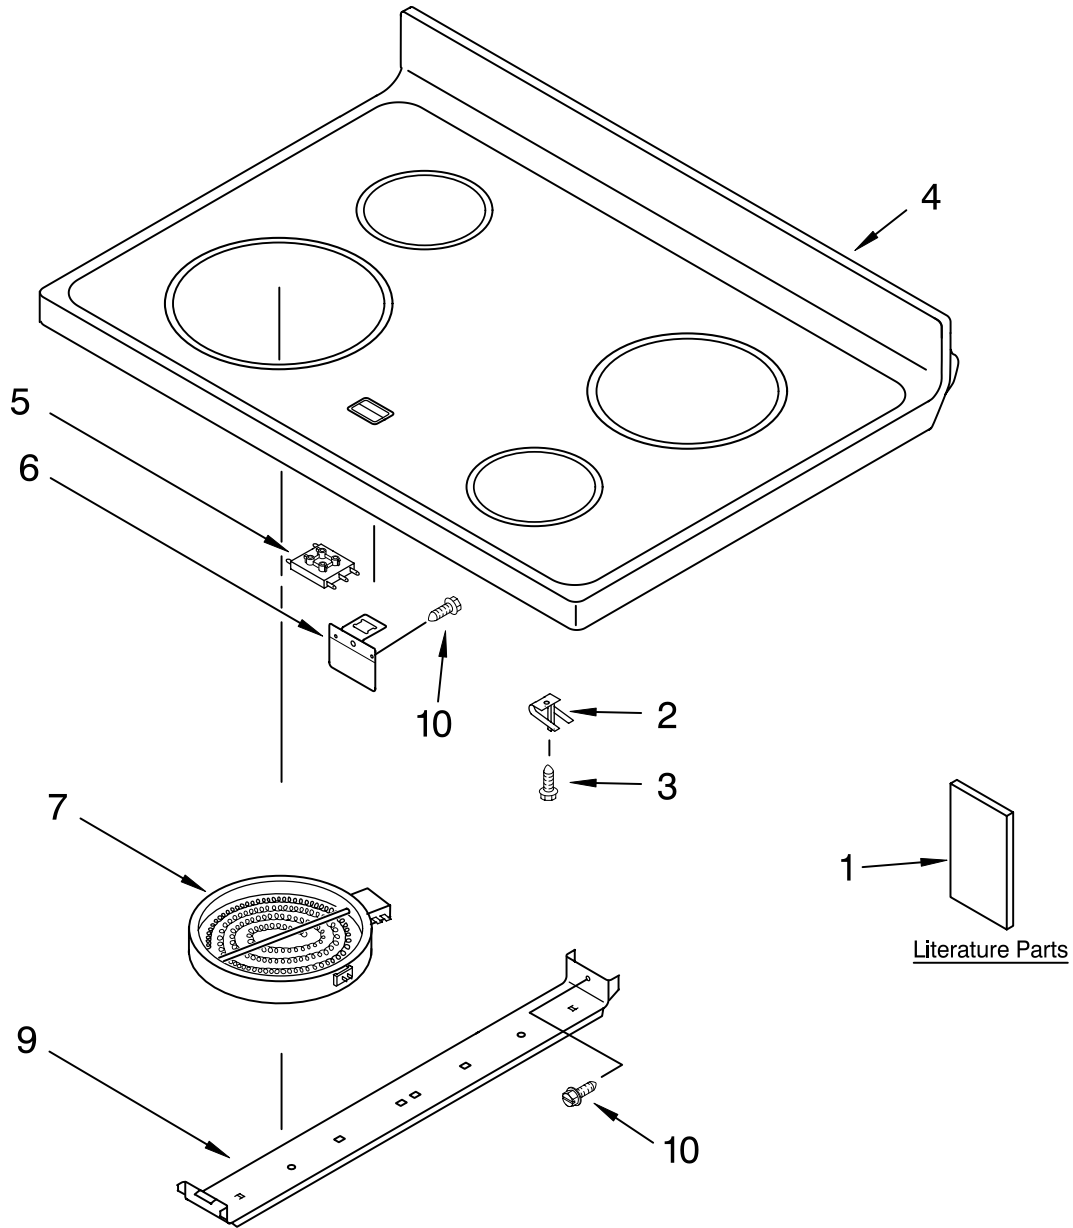

COOKTOP PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXPT2, RF364PXPB2
(White) (Designer White) (Designer Biscuit) (Black)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN



Illus. No.	Part No.	DESCRIPTION
1	9758377	Literature Instructions, Installation Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9762365	Guide, Use & Care
	9757347	Tech Sheet
	3191638	Safer Cooking Tips

Illus. No.	Part No.	DESCRIPTION
2	3149191	Spring, Locator
3	3196170	Screw
4	9755823	White/Classic WT.
	9755822	White/Bk. Glass
	9755833	Biscuit/Honeycomb
	9755824	Black


Illus. No.	Part No.	DESCRIPTION
5	8523740	Light, Indicator (Hot Surface)
6	8524063	Bracket, Ind Light
7	8523695	Element, Surface
	8523697	2000 W - LF,RR
	8523697	1500 W - LR,RF
9	3196454	Bracket, Element
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXPT2, RF364PXPB2

(White) (Designer White) (Designer Biscuit) (Black)

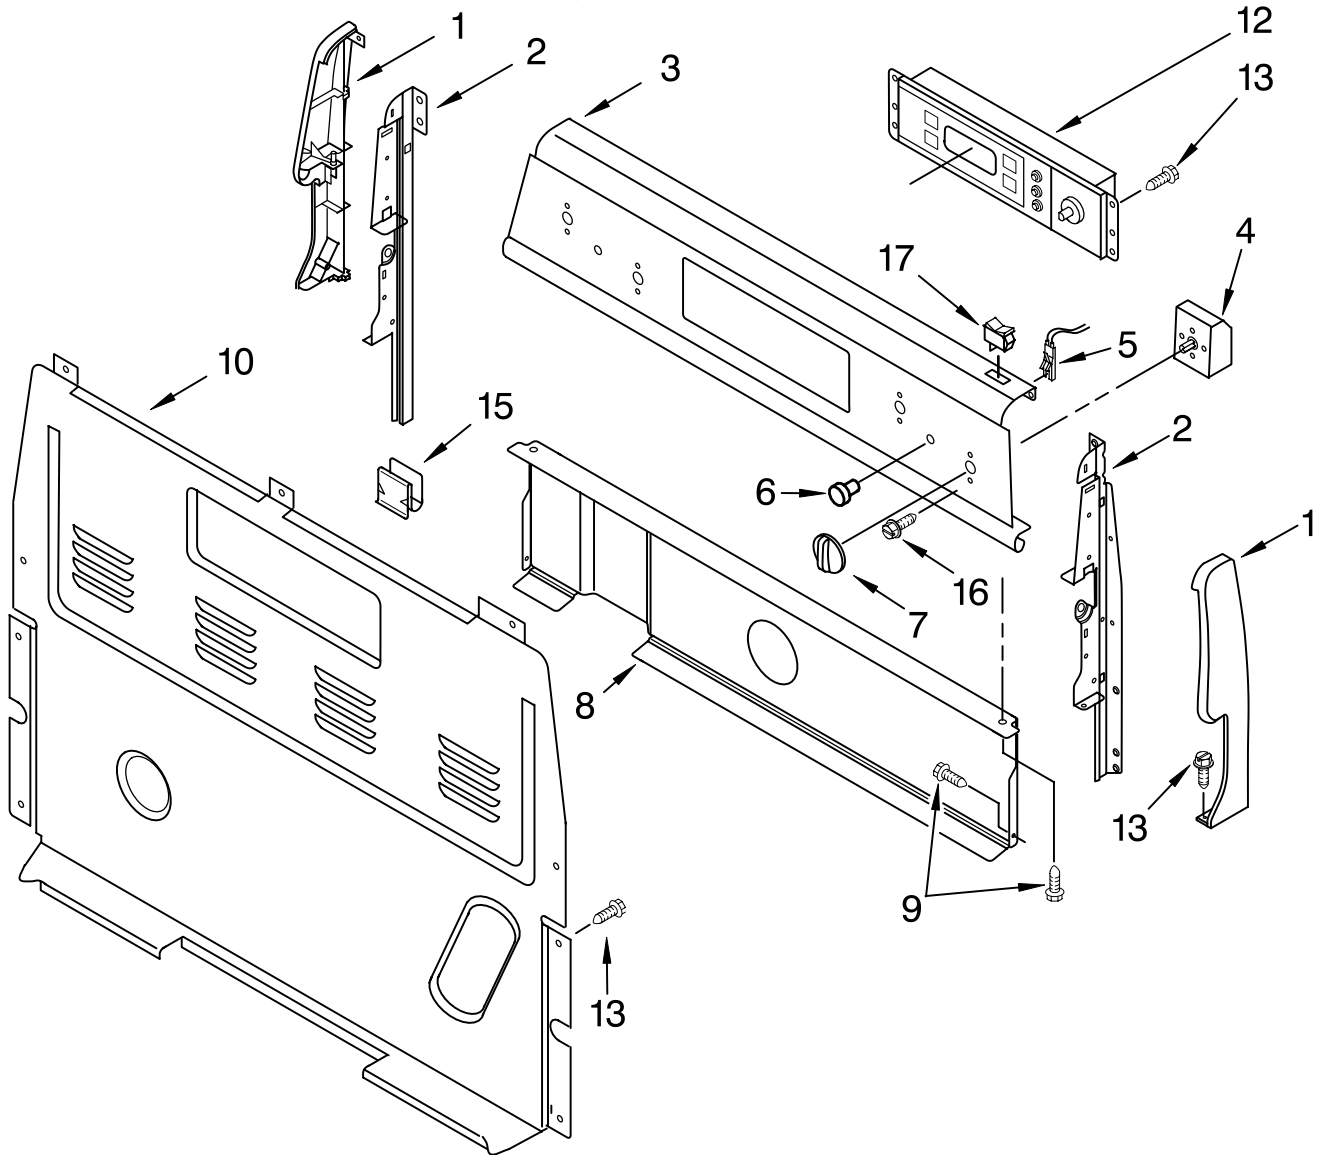

Illus. No.	Part No.	DESCRIPTION
1	3186190	White Left Hand
	3186191	White Right Hand
	3186188	Black Left Hand
	3186189	Black Right Hand
	8272507	Biscuit Left Hand
	8272508	Biscuit Right Hand
2		Support, Endcap
	8523408	Left Hand
	8523409	Right Hand
3		Panel, Backguard
	3186173	White
	3186171	Black
	8273510	Biscuit


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148953	Left Front
	3148952	Left Rear
	3148953	Right Rear
	3148952	Right Front
		Surface Unit (2)
5	8523265	Light, Indicator
		Surface Unit (2)
6	3196068	Lens, Light (2)
		Knob, Infinite (4)
7	8522565	White
	8522566	Black
	8522567	Biscuit

Illus. No.	Part No.	DESCRIPTION
8	8523280	Shield, Heat
9	4449746	Screw
10	8272473	Cover, Upper
		Control, Range
12	6610452	White
	6610453	Black
	6610454	Biscuit
13	3196178	Screw
15	8273564	Clip
16	3400882	Screw
17		Switch, Rocker
	3149360	White
	8273501	Biscuit
	3148564	Black

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXP2, RF364PXPB2
(White) (Designer White) (Designer Biscuit) (Black)

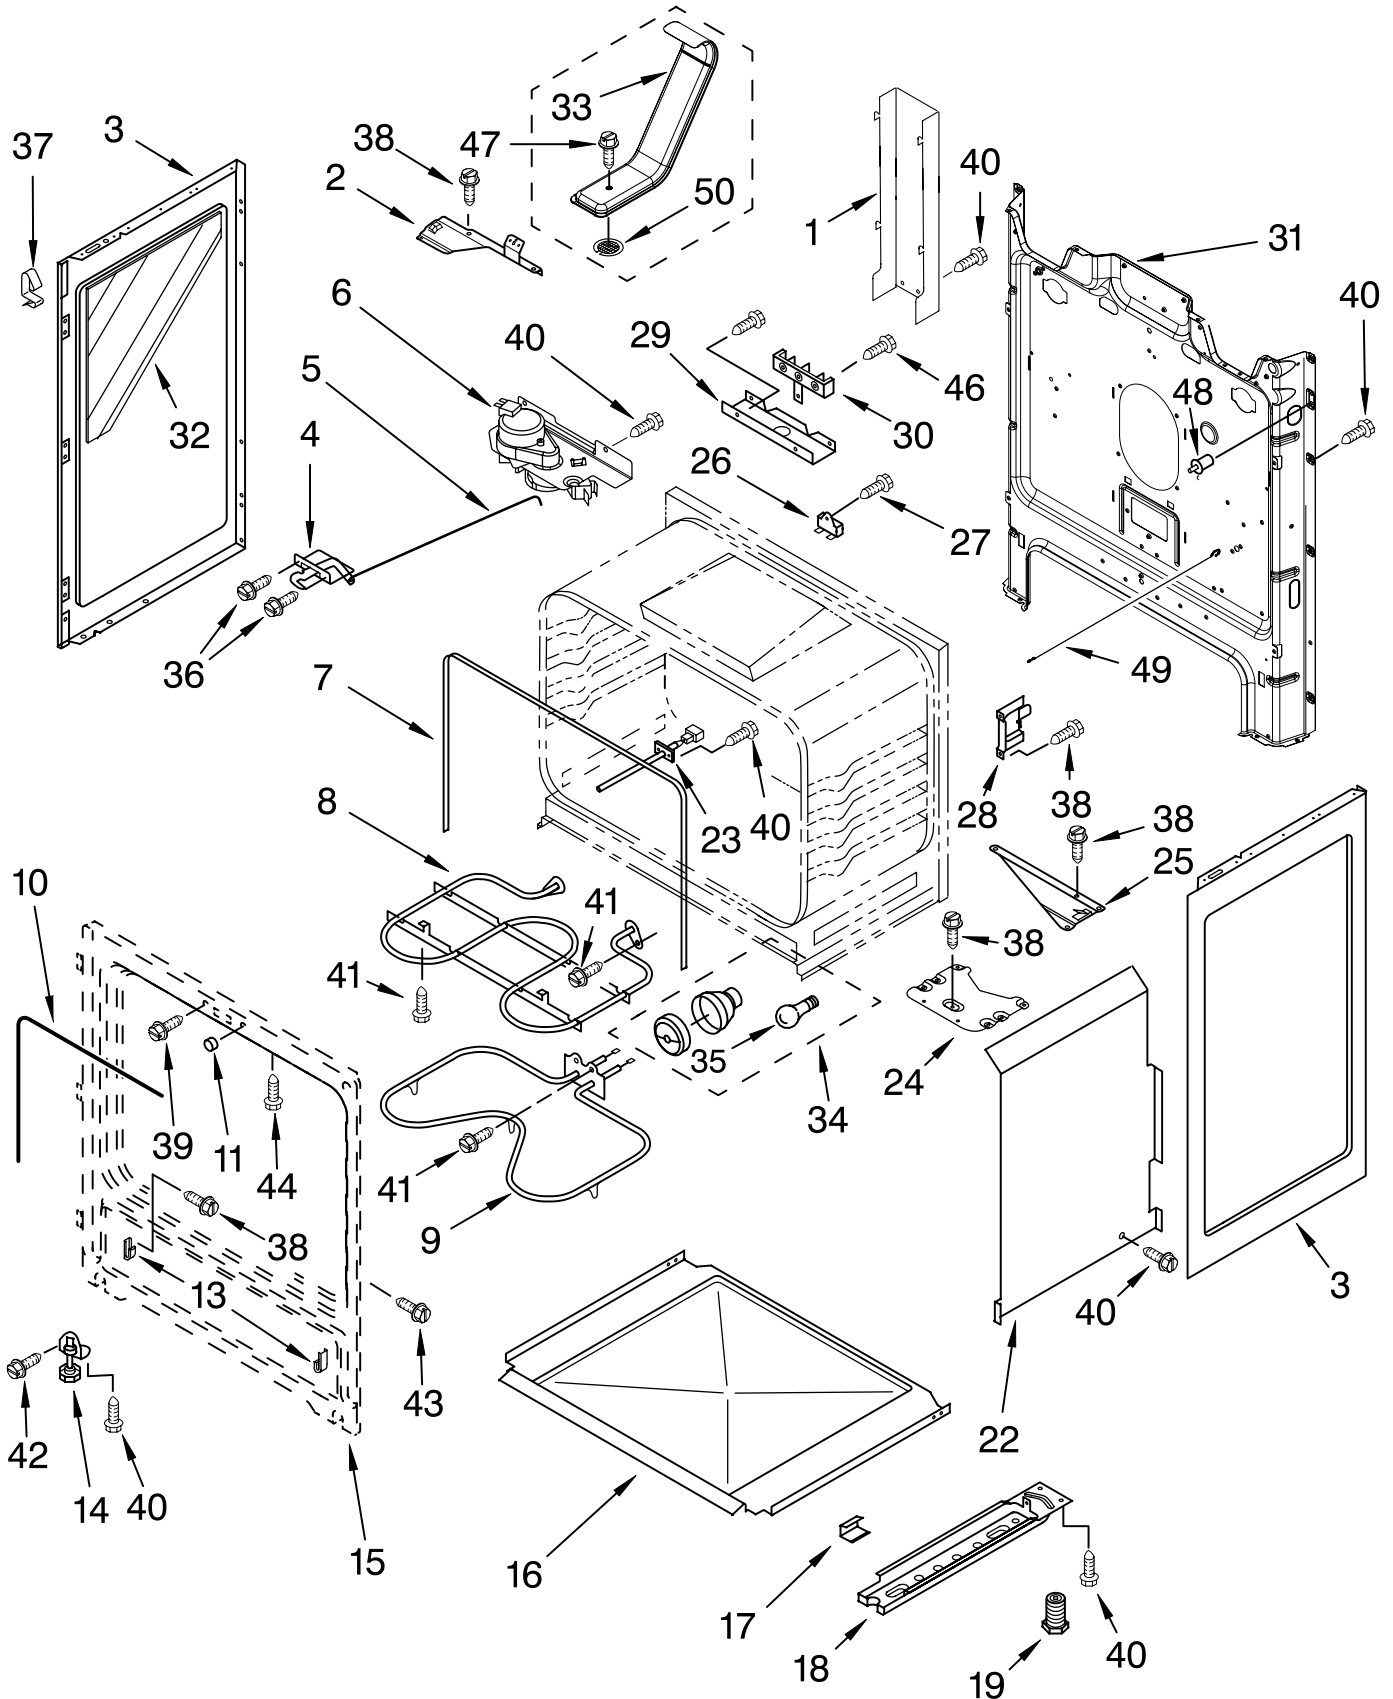

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXPPT2, RF364PXPB2
(White) (Designer White) (Designer Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9758283	Cover, Box	19	9761935	Foot, Rear (2)	39	3196168	Screw
2	8273905	Support, Corner LR	22	8523803	Retainer, Side (2)	40	3196178	Screw
3		Panel, Side (2)	23	8273902	Sensor, Oven	41	3196174	Screw
	8053830	White-Textured	24	3195736	Support, Front (2)	42	3196179	Screw
	8272519	Biscuit-Textured	25	3195987	Support, Corner RR	43	3196177	Screw
	8053832	Black	26	3196548	Fuse, Thermal	44	3196176	Screw
4	9761013	Latch, Door	27	3196172	Screw	46	3400016	Screw
5	3196961	Rod, Latch	28	3186116	Support, Oven (2)	47	3196566	Screw
6	9757242	Latch Ass'y, Rear	29	3186034	Bracket, Service	48	9757238	Switch – Door
7	3195737	Seal, Oven Flange	30	9761958	Block, Terminal	49	9757239	Rod – Dr Switch
8	9757340	Element, Broil		112432	Nut (3)			Rear Mount
9	9758541	Element, Bake	31	8274034	Back, Main	50	9761301	Screen – Catalyst
10	8522416	Seal, Oven Door	32	9761490	Insulation			
11	9758701	Spacer, Door	33	9761300	Vent Tube Asm			
13	9759785	Glide, Drawer (2)	34	3196701	Light Socket Assy			
14	3196037	Foot, Front (2)	35	311255	Bulb, Oven Light			
15		Frame, Front (Not Serviced)	36	3196560	Screw			
16	8054068	Tray, Insulation	37	3195813	Clip, Insultion			
17	3196576	Clip, Panel (6)	38	3196169	Screw			
18	9760314	Rail, Base (2)						


INSULATION

8272616 Insulation, Wrap
8272612 Insulation, Back
8272613 Insulation, Vent

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXPT2, RF364XPXB2
(White) (Designer White) (Designer Biscuit) (Black)

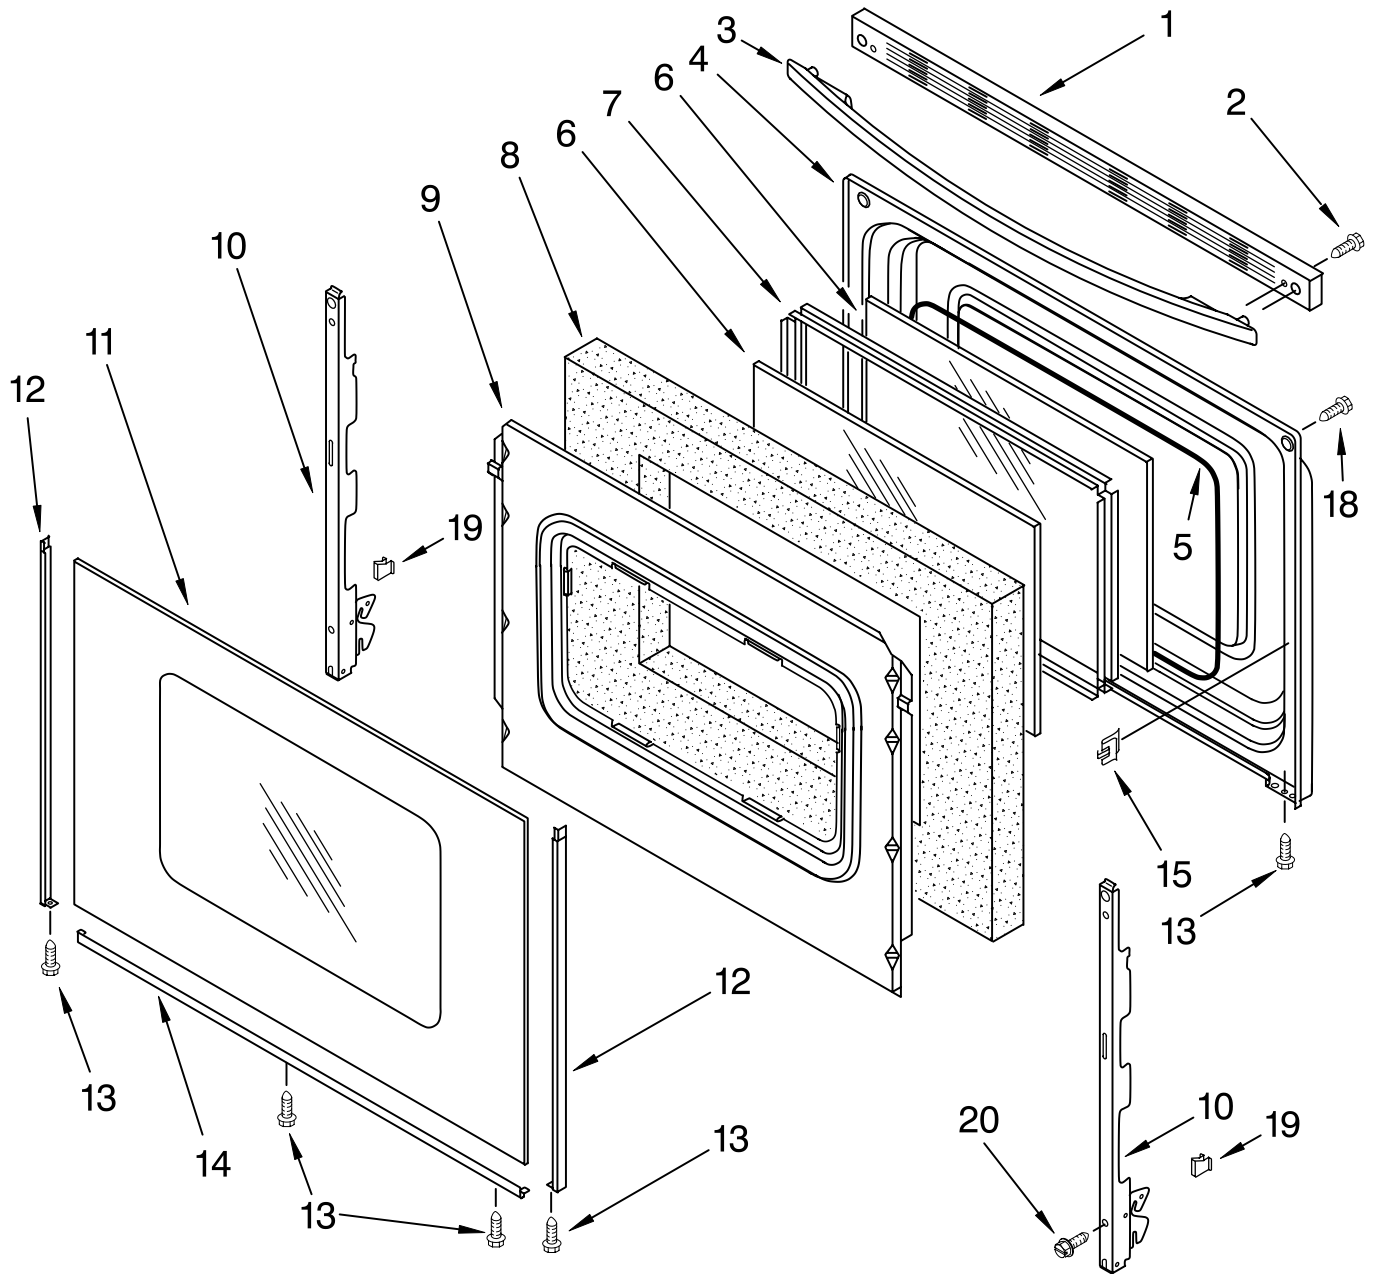

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS


For Models: RF364PXPW2, RF364PXPQ2, RF364PXPT2, RF364XPB2
(White) (Designer White) (Designer Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Door Top
	8522433	White
	3196819	Black
	8522434	Biscuit
2	3196164	Screw
3		Handle, Door
	8522444	White
	3195922	Black
	8522445	Biscuit
4	3186296	Liner, Door
5	8522415	Seal, Window
6	9758164	Glass, Inner (2)
7	3186290	Frame, Glass
8	8272618	Insulation, Door
9	3186299	Retainer, Insul.
10	8053807	Hinge, Door (2)
11		Glass, Outer Door
	8053481	White
	8053479	Black
	8273525	Biscuit
12		Trim, Side
	8523172	White Left Hand
	8523171	Black Left Hand
	8523173	Biscuit Left Hand
	8523166	White Right Hand
	8523165	Black Right Hand
	8523167	Biscuit Left Hand
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523177	Black
	8523178	Biscuit
15	3196025	Clip, Glass (4)
18	3196161	Screw
19	3196925	Clip, Door Stop
20	3196165	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXPT2, RF364PXPB2
(White) (Designer White) (Designer Biscuit) (Black)

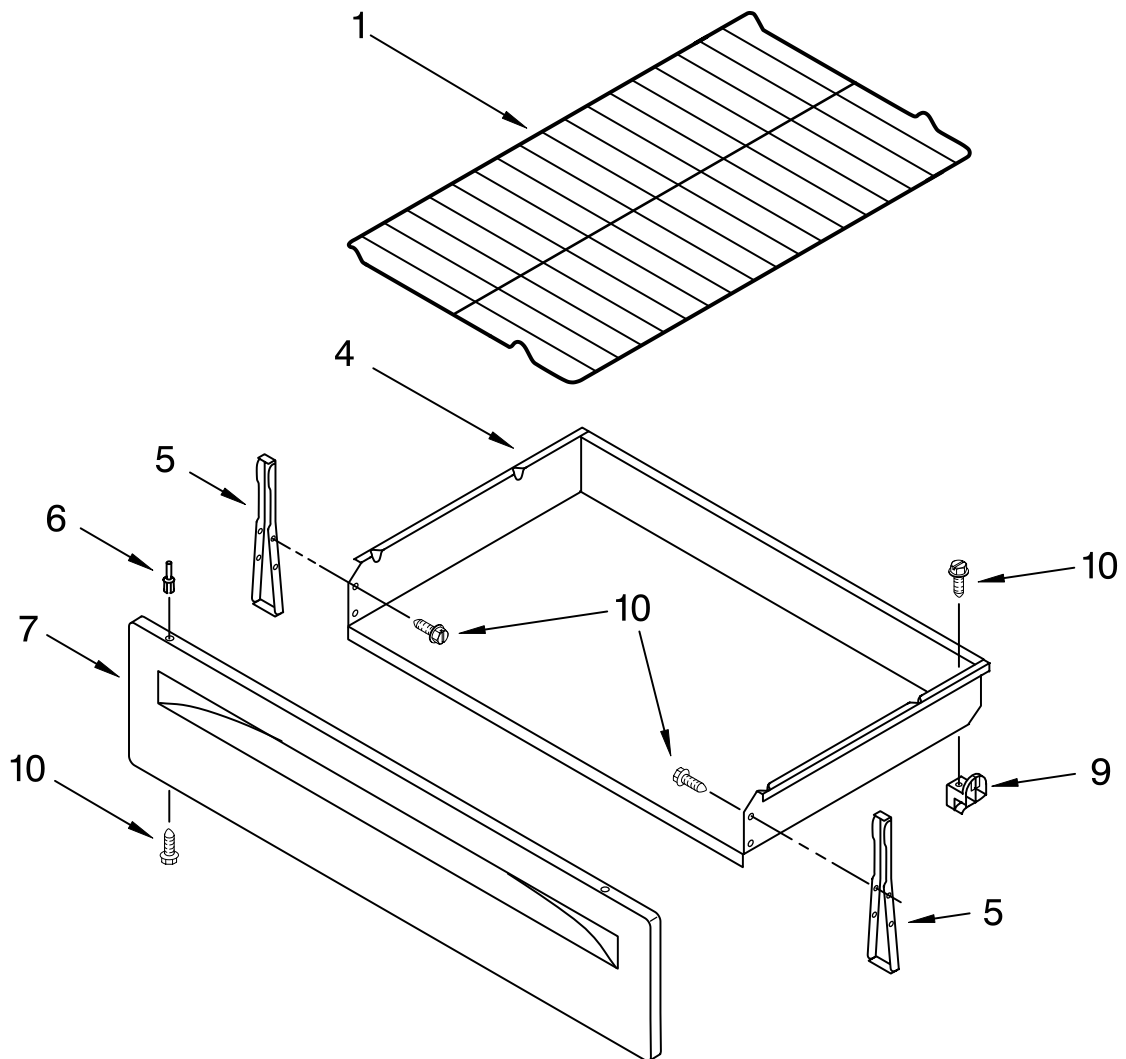

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RF364PXPW2, RF364PXPQ2, RF364PXP2, RF364PXPB2
(White) (Designer White) (Designer Biscuit) (Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Parts Not Illustrated and
Optional Parts (Not Included)

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
313660	Clip, Ground Wire x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan - Broiler

ANTI-TIP KIT

9757976	Anti-Tip Kit
---------	--------------

WIRING HARNESS PARTS

9761468	Harness, Wire (Cooktop Left)
9761458	Harness, Wire (Cooktop Right)
4454062	Harness, Wire (Rckr-1 Hot)
9758173	Harness, Wire (Sensor/Dr Switch) (Door Switch)
8524132	Shield, Wiring
8524114	Relief, Strain
8523279	Wire, Ground
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground

Miscellaneous

3196897	Pin Kit-Dr Removal
---------	--------------------